

## General Remarks

1. SolaTerre floors are immediately available for use- no waiting for adhesive to dry or cure.
2. To protect against impressions from static loads and abrasion from moving furniture use plastic casters and glides of adequate size.
3. Periodically clean wheels and rollers of chairs and carts to prevent scratches.
4. Extended direct full sunlight exposure may cause changes in appearance- use blinds or drapes during peak sunlight hours.
5. Use entry mats or throw rugs with non-stain backing to limit tracked-in dirt and debris.
6. Finishes can be applied, but are not necessary if regular cleaning is done dependent upon the type and amount of traffic.

## Initial Maintenance

1. Ensure any and all residual adhesive has been removed from the surface- hand-sanitizer or minerals spirits on a rag is effective.
2. Sweep, vacuum or dust mop to remove all dirt and grit.
3. Clean with a wet mop or pad using a solution of water and regular floor cleaner. Let dry.

## Regular Maintenance

1. Sweep or vacuum daily to remove dust and dirt. If necessary, clean with a damp mop or pad using a regular floor cleaner solution.
2. Adhesives, paints, cosmetics & petroleum products must be removed immediately to prevent stains.

## Precautions

1. A low-speed power buffer may be used on heavy traffic areas using the lightest possible abrasion pads. (refer to machine manufacturer recommendations & test on low-visibility area before continuing)
2. Base King cannot be held responsible for indentations from stiletto heels or other high (1,000 psi or more) load items.